

# **ITEMS REQUIRED**







**BARBECUE** 

**PROPANE HOSE** 

**PROPANE TANK** 

## **HOW TO OPERATE**

- 1. **NOTICE:** These barbecues are designed for outdoor use only.
- 2. Connect the propane tank to the barbecue, see reverse for Propane Use & Safety.
- 3. Make sure all control knobs are in the CLOSED position.
- 4. Turn the propane tank's valve completely open.
- 5. Hold a lit butane gun next to burner, turn burner knob to OPEN and the burner will ignite instantly.
- For safety, we recommend lighting the furthest burner from the propane tank first and work your way closer.
- Adjust control knobs to desired temperature.
- Be sure to close all control knobs. CLOSE propane tank valve and disconnect the barbecue from the propane tank once you are finished cooking.

#### WATCH TUTORIAL VIDEO HERE

## TROUBLESHOOTING

PROBLEM	QUICK FIX
Burner won't ignite	Check to makes sure propane tank is full.  Turn burner knob to OPEN and wait for few seconds. If it will not ignite instantly repeat a few times.
Uneven heating/hot spots	The burners may be clogged from drippings. Use a wire brush to remove particles from burners. Do not use oven cleaner or harsh detergents on the burners.
Low flame/ temperature	Check to make sure propane tank is full. Turn off the gas at the propane tank and disconnect the hose. Turn all control valves on high for 1 minute and then turn off. Reconnect the propane tank and hose. Slowly turn on the gas and light grill normally.



### **PROPANE USE & SAFETY**

#### **CONNECTING TANK**

- Remove the main tank's valve plug. Thread the POL connector snugly into the main tank by turning the tank valve counter-clockwise.
- Always position the propane tank so that the connecting hose is not bent.

#### **GENERAL USE & DISCONNECTING**

- Use soapy water to test all fittings and connections for leaks before operating the appliance.
- NEVER use propane tanks indoors.
- Propane tanks are designed to be used with the valve completely open. Never leave the valve partially open or closed.
- When not in use, turn off all temperature controls and completely close the main valve on the propane tank.

#### **STORAGE & TRANSPORTING**

- All propane tanks must be secured in an upright position.
- To prevent the propane tank from being overturned, place in a box or crate.
- Never store propane tanks in a building or a hot vehicle. Heat may cause the relief valve to discharge propane and create a dangerous situation.

#### FOOD VENUE FIRE CODE SAFETY

- All food venues must be equipped with a portable multi-purpose dry chemical fire extinguisher. Please follow provincial and municipal guidelines in regards to fire extinguishers.
- Cooking appliances must be at least 1m away from combustible material, structure or tent or separated using fire rated wall board, tile or stainless steel to reduce spatial requirements.
- All open flames and hot surfaces must be out of reach of the public (at least 1m away).

### **BEFORE RETURNING**

- A \$47.50 cleaning charge will apply to each griddle if units are not returned in the same condition they were received.
- To avoid cleaning charges, empty drip pans. Scrape surface free of food and charred particles with a wire brush. Wipe interior and exterior with hot soapy water including: stand, hose, drip pan, propane tank and underside of grates.