

COFFEE URN OPERATION





Fill coffee urn with COLD water to desired amount. Do not use hot water or coffee urn will not brew.





into the center of the opposite end of stem.

Pour coffee into basket (See next page for recommended measurements). Do not use drip or finely ground coffee.



Plug coffee urn into a standard electrical outlet. Coffee urns consume considerable amount of power. Urns are to be plugged into different outlets and on different circuits.



The coffee urn will stop automatically when the coffee has finished brewing, and the ready light will glow.



Remove cover and discard coffee arounds from coffee basket. Replace cover. The coffee urn will continue to keep the coffee hot.

TROUBLESHOOTING

PROBLEM	QUICK FIX	
Leaking	• Check to make sure gauge cap, located at the top of the view tube, is tight or the dispensing faucet is tight.	
	• Check to make sure the stem is aligned with the heating unit.	
No power	• Ensure that the urn is not unplugged, switched on and that the outlet is generating power.	
	• If an extension cord is to be used with the coffee urn, it must be 12-gauge or greater.	



BREWING TIME & MEASUREMENTS

To avoid flooding the coffee basket, DO NOT USE DRIP OR FINELY GROUND COFFEE. Always keep water and amount of coffee grounds between the minimum and maximum for our urn size.

110 CUP URN

Brewing time: Approximately 1 hour & 30 minutes.

	AMOUNT OF COFFEE GROUNDS*	
WATER LEVEL	STRONG	MILD
110 cup (max.)	9 cups	7 ¼ cups
80 cups	6 ½ cups	5 cups
60 cups	5 cups	4 cups
40 cups (min.)	3 ½ cups	2 ½ cups

60 CUP URN

Brewing time: Approximately 1 hour & 15 minutes.

	AMOUNT OF COFFEE GROUNDS*		
WATER LEVEL	STRONG	MILD	
60 cup (max.)	6 cups	4 ½ cups	
45 cups	4 cups	2 ¾ cups	
35 cups	3 ¼ cups	2 cups	
25 cups (min.)	2 ¼ cups	1 ½ cups	

40 CUP URN

Brewing time: Approximately 1 hour

	AMOUNT OF COFFEE GROUNDS*	
WATER LEVEL	STRONG	MILD
40 cup (max.)	3 ½ cups	2 ½ cups
20 cups	2 cups	1 ½ cups
12 cups (min.)	1 ¼ cups	1 cup

BEFORE RETURNING

- A \$57.50 cleaning charge will apply to each urn if they are not returned in the same condition they were received.
- To avoid cleaning charges, remove any residue coffee and coffee grounds and rinse out the basket and the interior of the urn. Never immerse the coffee urn in water!

Edmonton • Red Deer • Calgary • Regina | www.specialeventrentals.com