


HOW TO OPERATE SNO-KONE

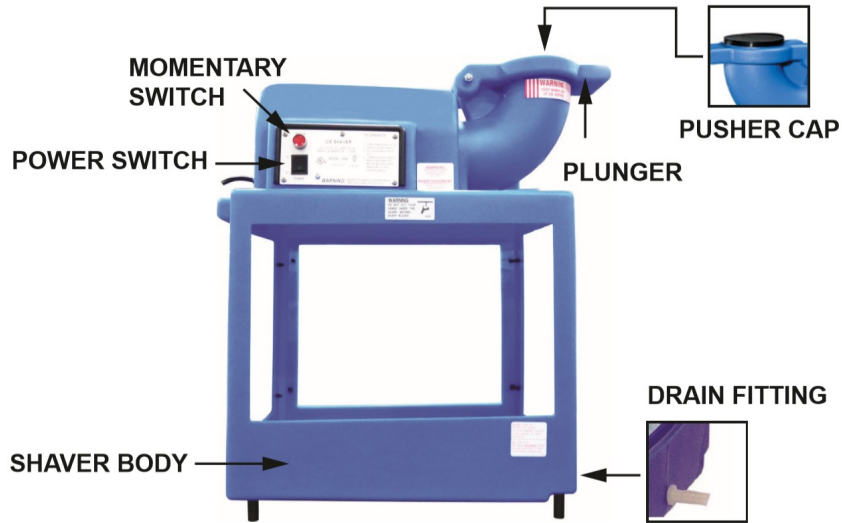

	<p style="text-align: center;">⚠ WARNING</p> <ul style="list-style-type: none"> Never put your fingers or any object into the plunger (the goose-neck) while the motor is running. Serious injury may occur. Special Event Rentals does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.
	<p style="text-align: center;">⚠ CAUTION</p> <ul style="list-style-type: none"> Do not allow the general public to handle machine when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. This machine is not to be operated by anyone under the age of 18.

1. Load hopper with ice.
2. Close pusher cap and apply gentle downward pressure.
3. Turn on the power switch.
4. Press and hold in the momentary switch. Release the button once all of the ice has been shaved. **NOTICE:** Never allow any foreign or metallic objects around the shaver area. Ice picks, scoops and debris that may be in the ice often damage blades.
5. Do not lift the pusher cap until the motor is off and the shaver head has stopped.

ICE REQUIREMENTS

- Sno-Kone machines can take ice cubes or block ice, if you break the block into pieces approximately 2-3" in size. The chute is specifically designed to automatically draw ice against the blades and does not require any manual effort.
- NOTICE:** The ice will not enter the shaving chute if the pieces are too large.
- Be sure not to shave large quantities of ice quickly and let the ice pile up in the case. This will block the discharge chute and jam the machine.

ELECTRICAL REQUIREMENTS

	<p>⚠ DANGER</p>
	<ul style="list-style-type: none"> Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do not immerse any part of this equipment in water. Do not use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Do not use an extension cord. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.

TROUBLESHOOTING

PROBLEM	QUICK FIX
<i>Drain blockage</i>	<ul style="list-style-type: none"> With the motor turned OFF, clear out the ice with a piece of wood and allow the remainder to melt.

BEFORE RETURNING

- A \$47.50 cleaning charge will apply to each Sno-Kone machine if units are not returned in the same condition they were received.
- To avoid cleaning charges, wipe the outside parts with a clean cloth.
- Use only non-ammonia cleaners when wiping down all interior and exterior surface areas clean.