 





SPECIAL *Event* RENTALS

ITEMS INCLUDED

WATER PAN




   DRIP TRAY

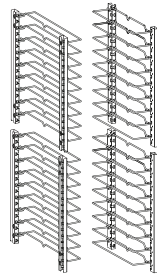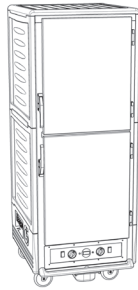

36 CHROME SLIDES

 HOW TO OPERATE WARMING CABINET

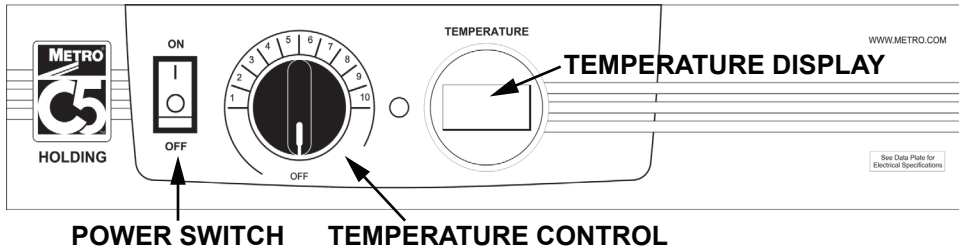

⚠ WARNING

- To avoid burns, do not touch the water pan during use. Turn off and allow the water to cool before emptying the pan.

⚠ CAUTION

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this unit or any other appliance.
- Water dripping onto the floor from open doors can be a slip hazard.

- NOTICE:** If moisture is desired, fill the water pan to 1/2" from the top with clean HOT tap water. Otherwise, water pan does not have to be filled to operate.
- Set power switch to the ON position.
- Set temperature control to 10.
- Pre-heat cabinet until desired temperature is reached (typical heat-up time from 72°F (22°C) ambient to 160°F (71°C) is approximately 45 minutes).
- Re-set temperature control and adjust as necessary to reach the desired temperature (setting 6-8 typical for 150°F (66°C) to 160°F (71°C)). Power indicator light will turn on and off as the heat thermostat cycles.

SPECIAL *Event* RENTALS

ELECTRICAL REQUIREMENTS

⚠ DANGER

- Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death.
- Do not immerse any part of this equipment in water.
- Do not use excessive water when cleaning.
- Keep cord and plug off the ground and away from moisture.
- Do not use an extension cord.
- Always unplug the equipment before cleaning or servicing.
- Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.

TROUBLESHOOTING

PROBLEM	QUICK FIX
<i>Controls do not work</i>	<ul style="list-style-type: none"> Ensure that cabinet is plugged in and that outlet has power. Ensure that the power switch is in the ON position.
<i>Warming cabinet is too cold</i>	<ul style="list-style-type: none"> Ensure that door does not open frequently and that the door is shut properly. Increase temperature by turning control knob to higher setting.
<i>Moisture level is too low</i>	<ul style="list-style-type: none"> Check that stainless steel water pan has water. Ensure that door does not open frequently and that the door is shut properly.

BEFORE RETURNING

- Additional cleaning charges to apply if returned dirty.
- Water reservoir must be emptied and unit wiped down inside and out.